

 Sandberg®



Face-ID Webcam 2

Quick guide

134-40




www.sandberg.world

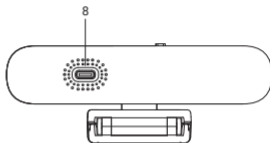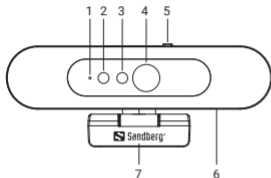
Overview


1. LED indicator light
2. Infrared indicator light
3. Infrared lens
4. Camera lens
5. Privacy switch on/off

6. Microphone
7. Adjustable mount
8. USB-C interface
9. USB cable

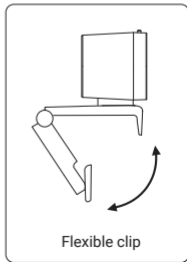

Connection

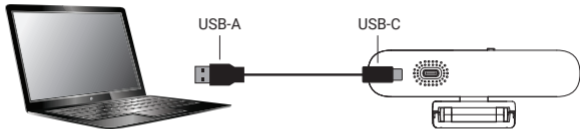

Mounting



On a Desk




On a PC Monitor



On a tripod, for example
Sandberg item no. 134-11

Setting Up Windows Hello function

- 1) Open "Settings" and click on "Accounts", then "Sign-in options".

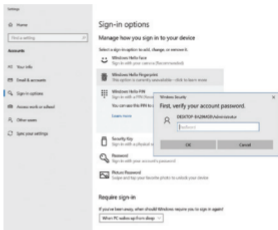

Settings

Home

This is setting

Accounts

- Your info
- Email & accounts
- Sign-in options**
- Access work or school
- Other users
- Sync your settings

Sign-in options

Manage how you sign in to your device
Select a sign-in option to add, change or remove it.

- Windows Hello Face
Sign in with your camera (Beta/Insider build)
- Windows Hello Fingerprint**
This option is currently unavailable - HKI feature view
- Windows Hello PIN
Sign in with an PIN (Beta)
You can use the PIN to:
Learn more
- Security Key
Sign in with a USB device or a smart card
- Password
Sign in with your account's password
- Picture Password
Snap and tap your favorite photos to unlock your device

Require sign-in

If you've been away, when should Windows require you to sign in again?
When PC wakes up from sleep


Windows Security

First, verify your account password.

DESKTOP-842M8D\Administrator

OK Cancel

- 2) Set up a PIN code.

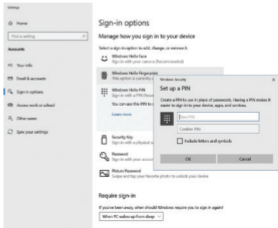

Settings

Home

This is setting

Accounts

- Your info
- Email & accounts
- Sign-in options**
- Access work or school
- Other users
- Sync your settings

Sign-in options

Manage how you sign in to your device
Select a sign-in option to add, change or remove it.

- Windows Hello Face
Sign in with your camera (Beta/Insider build)
- Windows Hello Fingerprint
This option is currently unavailable - HKI feature view
- Windows Hello PIN**
Sign in with an PIN (Beta)
You can use the PIN to:
Learn more
- Security Key
Sign in with a USB device or a smart card
- Password
Sign in with your account's password
- Picture Password
Snap and tap your favorite photos to unlock your device

Require sign-in

If you've been away, when should Windows require you to sign in again?
When PC wakes up from sleep

Windows Security

Set up a PIN

Create a PIN to use in place of passwords. Having a PIN makes it easier to sign in to your device, apps, and websites.


New PIN

Confirm PIN


Include letters and symbols

OK Cancel


3) You will now see which options are available. Face option and set up.

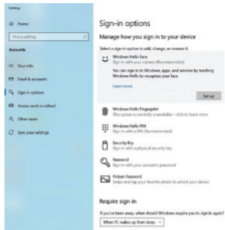

4) Click on "Get started".

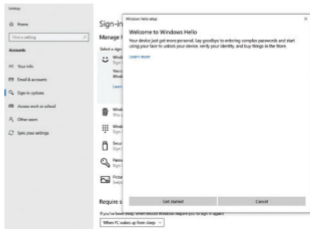

- 5) Position yourself in the center, and the camera will register your face.

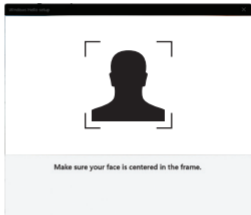

- 6) Optionally, you can improve recognition if for example you wear glasses.



The camera works driver-less and is compatible with most chat applications.

*If you want to get further options for video-effects and image adjustments, please follow this link: **www.sandberg.world/webcamguide***



Support

<http://helpdesk.sandberg.world>

Warranty

There is a five-year warranty on your Sandberg product.
Please read the warranty terms and register your new
Sandberg product at www.sandberg.world/warranty

5
Years
Warranty

Face-ID Webcam 2

Item no. 134-40
www.sandberg.world
Sandberg A/S
Bregnerødvej 133D,
3460 Birkerød,
Denmark
Made in China



For information on handling electronic waste, see www.sandberg.world/weee

