

 Sandberg®

5
Years
Warranty


 





Quick Guide

134-44


www.sandberg.world

Face-ID Webcam Mini Pro

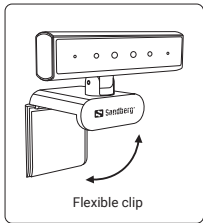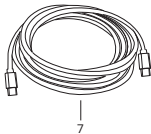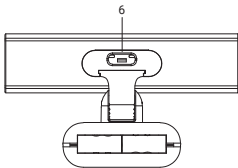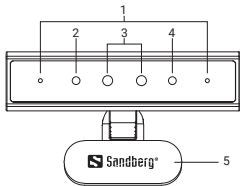
Overview


1. Microphone
2. LED light
3. Camera lens
4. IR sensor
5. Adjustable mount
6. USB-C interface
7. USB-C to USB-C cable
8. USB-C to USB-A adapter


Connection

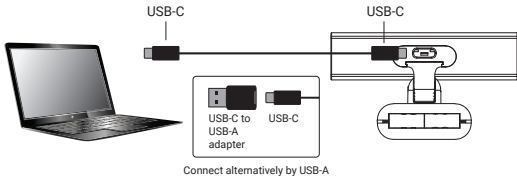

Mounting

 

On a Desk

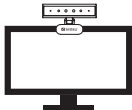


On a PC Monitor

Setting Up Windows Hello function


1) Open "Settings" and click on "Accounts", then "Sign-in options".

2) Set up a PIN code.

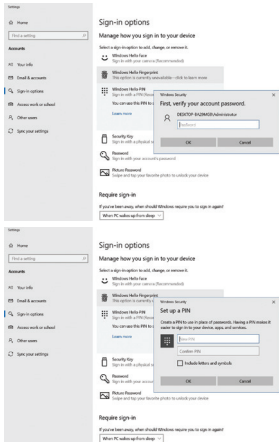

The screenshot shows the Windows Settings application. On the left, the 'Accounts' section is expanded to 'Sign-in options'. The main area displays 'Sign-in options' with the heading 'Manage how you sign in to your device'. Below this, there are several sign-in methods: Windows Hello Face (recommended), Windows Hello Fingerprint, Security Key, Password, and Picture Password. A 'Require sign-in' section is also present. Two dialog boxes are overlaid on the screen. The first dialog box is titled 'First, verify your account password' and contains a password field and 'OK' and 'Cancel' buttons. The second dialog box is titled 'Set up a PIN' and contains fields for 'New PIN' and 'Confirm PIN', a checkbox for 'Include letters and symbols', and 'OK' and 'Cancel' buttons.

- 3) You will now see which options are available. Face option and set up.

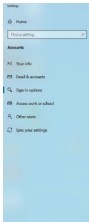

Sign-in options

Manage how you sign in to your device

Select a sign-in option to add, change, or remove it.

Windows Hello (Face)

Sign in with your camera. (Recommended)

You can sign in to Windows, apps, and services by touching Windows Hello to recognize your face.

[Learn more](#)

Set up

Windows Hello (IRM)

This option is currently unavailable—click to learn more.

Windows Hello (IRM)

Sign in with a Microsoft account.



Security Key

Sign in with a physical security key.



Password

Sign in with your account's password.



Picture Password

 
Swipe and tap your favorite photos to unlock your device.

Require sign-in

If you've been away, when should Windows require you to sign in again?

When PC wakes up from sleep

- 4) Click on "Get started".



Sign-in

Windows Hello setup

Manage

Welcome to Windows Hello

Your device just got more personal. Get guidance in entering complex passwords and start using your face to unlock your device, verify your identity, and buy things in the Store.

Select a sign-in option.

Learn more

Windows Hello (Face)

Windows Hello (IRM)

Security Key

Password

Picture Password

Learn more

Windows Hello (Face)

Windows Hello (IRM)

Security Key

Password

Picture Password

Learn more

Windows Hello (Face)

Windows Hello (IRM)

Security Key

Password

Picture Password

Learn more

Require sign-in


When PC wakes up from sleep

When PC wakes up from sleep


Get started

Cancel

- 5) Position yourself in the center, and the camera will register your face.

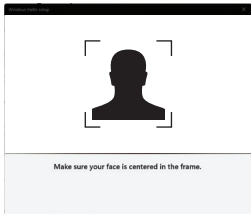

- 6) Optionally, you can improve recognition if for example you wear glasses.

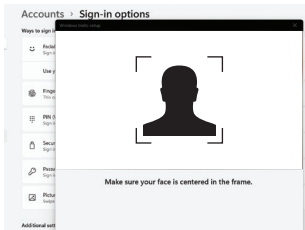

The camera works driver-less and is compatible with most chat applications.

*If you want to get further options for video-effects and image adjustments, please follow this link: **www.sandberg.world/webcamguide***

Support

<http://helpdesk.sandberg.world>

Warranty

There is a five-year warranty on your Sandberg product. Please read the warranty terms and register your new Sandberg product at www.sandberg.world/warranty

5

Years
Warranty

Face-ID Webcam Mini Pro

Item no. 134-44

www.sandberg.world
info@sandberg.world

Sandberg A/S
Bregnerødvej 133D,
3460 Birkerød, Denmark

Made in China



For information on handling electronic waste, see www.sandberg.world/weee